My Orrr-Orrr Dino

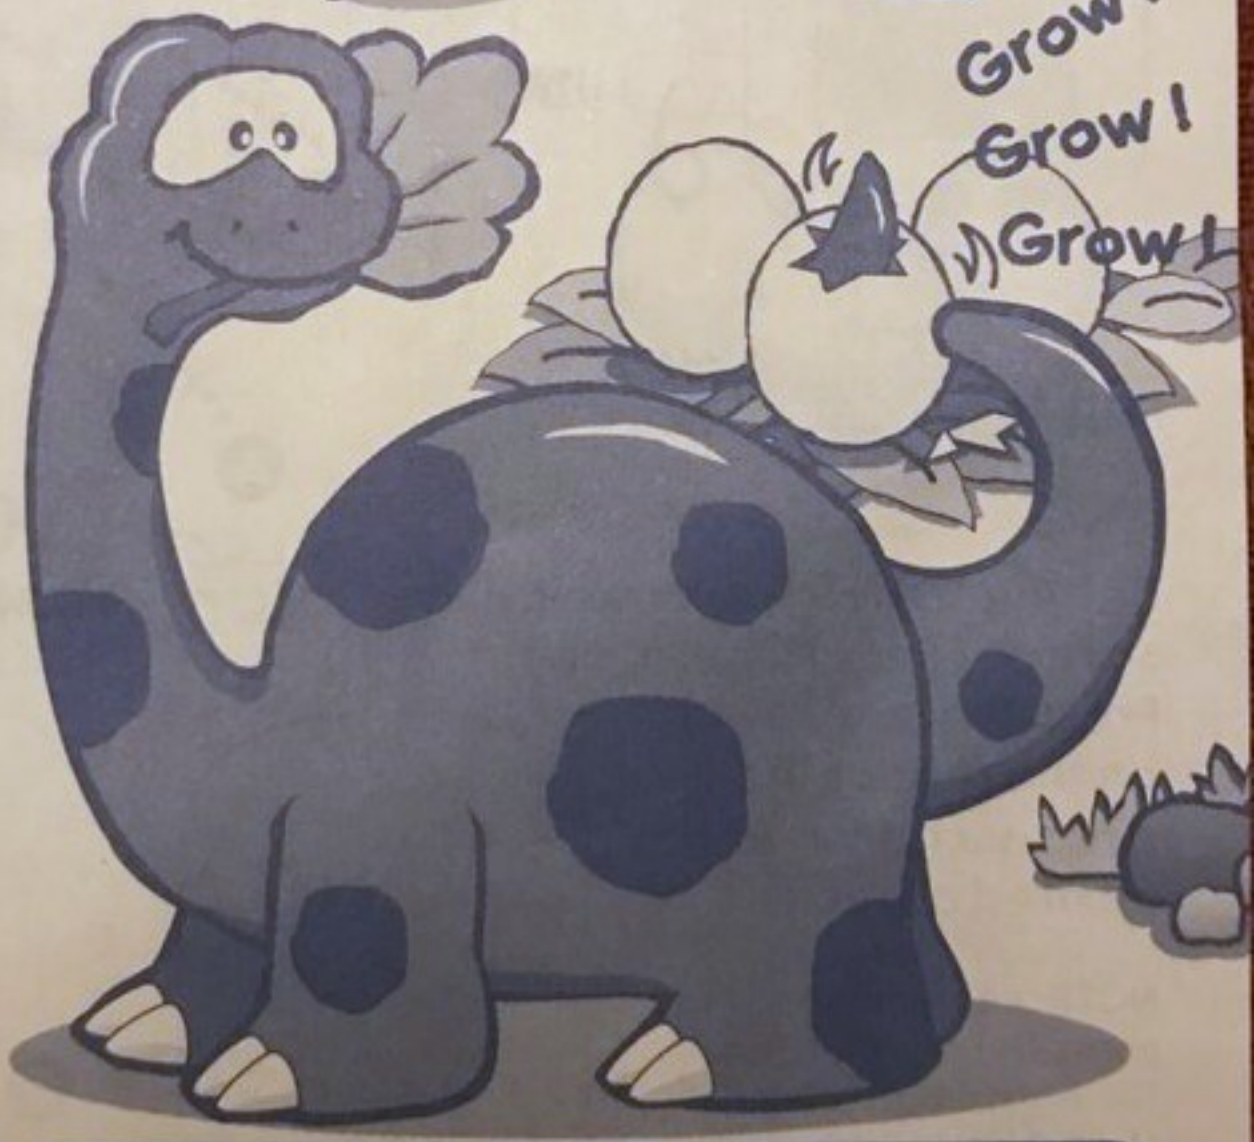

INSTRUCTION MANUAL

GENERAL DESCRIPTION

Wake up "DINO" by removing the insulating sheet.

INSULATING SHEET

LCD DISPLAY

A SELECT KEY

B CONFIRM KEY

C CANCEL KEY

Set the "DINO" communication screen (Reset Operation). Press the reset switch on the rear of the dinosaur game with a pointed object.

NOTE: Remember not to press the reset switch too hard when using a sharp rod, pencils, sharp pens, etc...

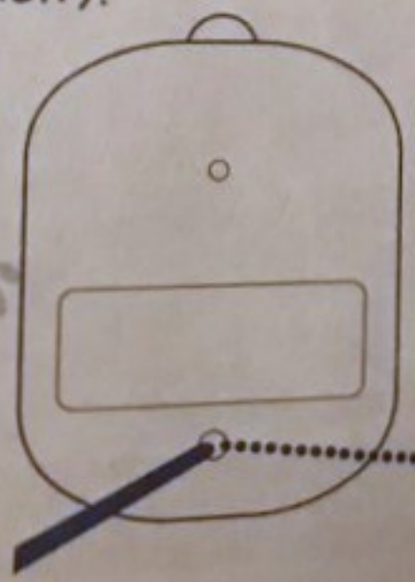

D RESET KEY

TIME ADJUSTMENT

First press the select key (A) to set HOURS. Use the confirm key (B) for confirmation & press the select key (A) again to set the MINUTES. Once you have set the correct time, press the confirm key for confirmation. If mistakes are made during the time setting sequence, the cancel key (C) may be pressed to correct the mistakes.

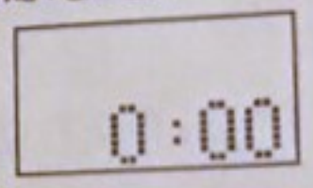

FOLLOW ME !!

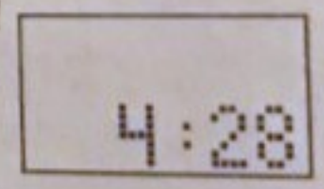

BABY COMING !

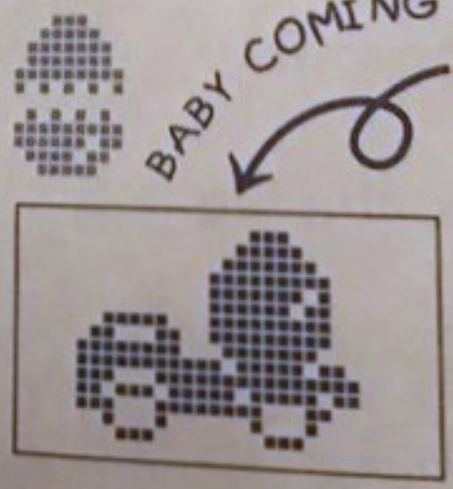

When the clock has been set, a sequence of pictures will appear. These pictures illustrate where the egg of the dinosaur comes from.

DINO'S GROWTH CHART

The growth of Dino is mainly divided into 3 stage :

- Infant Dinosaur (0 - 4 years)
- Children Dinosaur (5 - 9 years)
- Teen-ager Dinosaur (10 - 15 years)

INFANT DINO

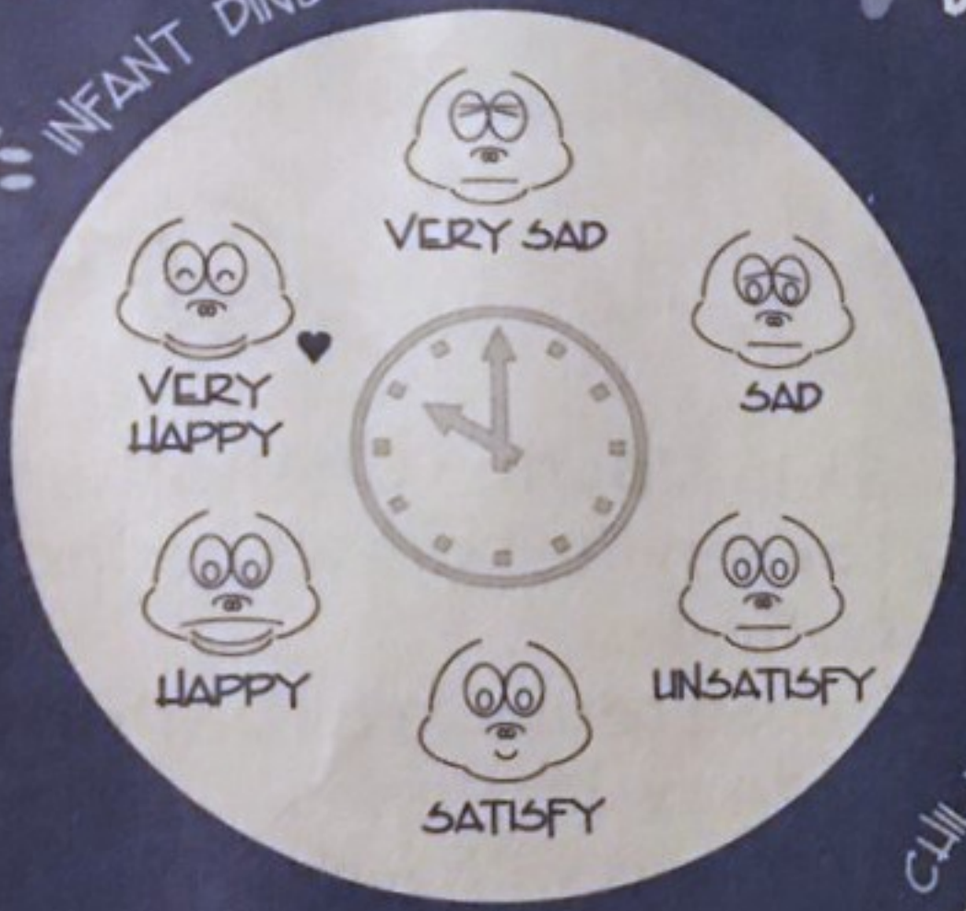

CHILDREN DINO

TEEN-AGE DINO

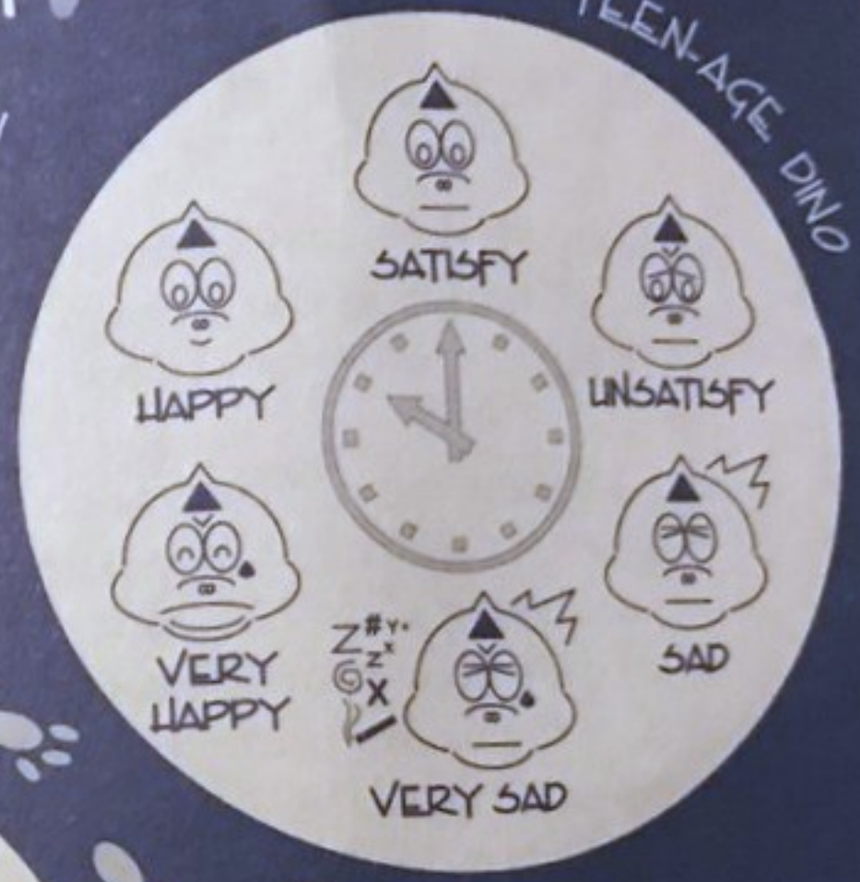

THE LOWER FACE OF THE DINO

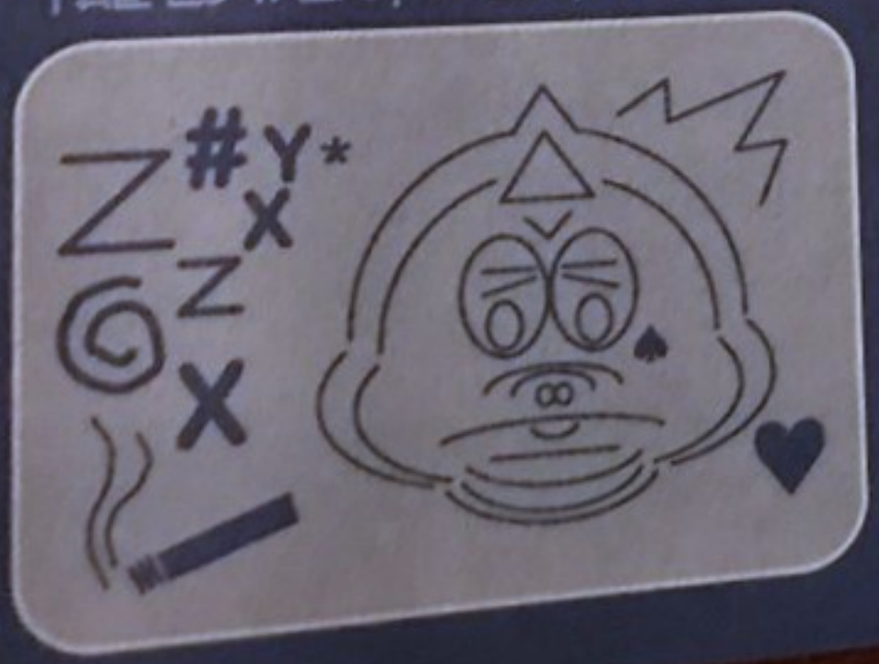

The DINO will need to be fed and played with soon after it hatches. In order to start the dino on a good growth path, you must take good care of it from the start. On the screen, the lower face of the dinosaur will show the current mood of the dino.

THE DINO GAME DETAILS

FEEDING

MEAL

When meal time arrives, a flashing icon appears. Each meal include 2 bowls of rice.

SNACK

A maximum of 10 snacks are allowed per day. If no snack is taken in 2 consecutive days, the dino will become sick.

WATER

At least one drink per day.

HYGIENIC CARE

FLOOR WASH & TOILET WASH

For outdoor cleaning, a "Sun" icon will be located in the upper left hand corner and 3 washes are necessary to clean 1 "Dung". For indoor cleaning, a "W.C." icon located in the upper left hand corner and 3 times of training of going toilet are required.

BATHING

If not bath is taken in 2 consecutive days, the dino will become sick. So the sickness may be avoided by simply taking a bath.

SLEEPING

INDOOR / OUTDOOR SLEEP

Temperature will change in each day. If the temperature is higher than 24 degree, it should sleep in outdoor (with a tree sign). If the temperature is less than 16 degree, it should sleep in indoor (with a door sign), otherwise it would be sick.

PLAYING

TOUCH

If the host touches dino, it can increase the mood index of dino.

WALK

If the host takes dino for a walk, it will burn weight for maintain fitness.

FOOTBALL

The host is playing with dino directly.

MEDICAL CARE

If the dino becomes sick, you should select this option.

PILLS

If a pill is taken first in a day, no injection is allowed. If a injection is attempted later that same day, it will automatically change to a pill instead.

INJECTIONS

One injection is sufficient for an entire day provided this option is chosen first in a day.

EDUCATIONAL TRAINING

This option may be selected at any time and is similar to action training. If the dino is not in the mood, it will reject the requested training. 2 types of action training are : going to the toilet & singing.

BODY STATUS

This option provides an overview of the current status of the dino. It takes into account the Mood Index, Age, Weight & Current Time.

ACTION TRAINING

This option reveals the health status of the dinosaur. If the dino does not have a favorable mood or is too light in weight (under 4 kg), it will refuse to do training. Rejection is shown by a shaking of the head or it will die. 4 types of action training are : sit down, turn around, jump & stand up.

PERFORMANCE

This option shows the current fitness of the dino. The dino will only perform an action which it already learned. Otherwise, a shaking of the head will be the reply to the host.

ENDING OF THE DINOSAUR

There are 3 different endings of the dinosaur, all of which are dependent upon the status of the dinosaur.

The game is terminated if the dino is sick for a long period of time

If the dino experiences improper care it may run away

If the dino receives proper and devoted care, it will have a harmony ending with a wedding party.

BATTERIES RE

Replace the batteries if the Liquid Crystal Display (LCD) is weak.

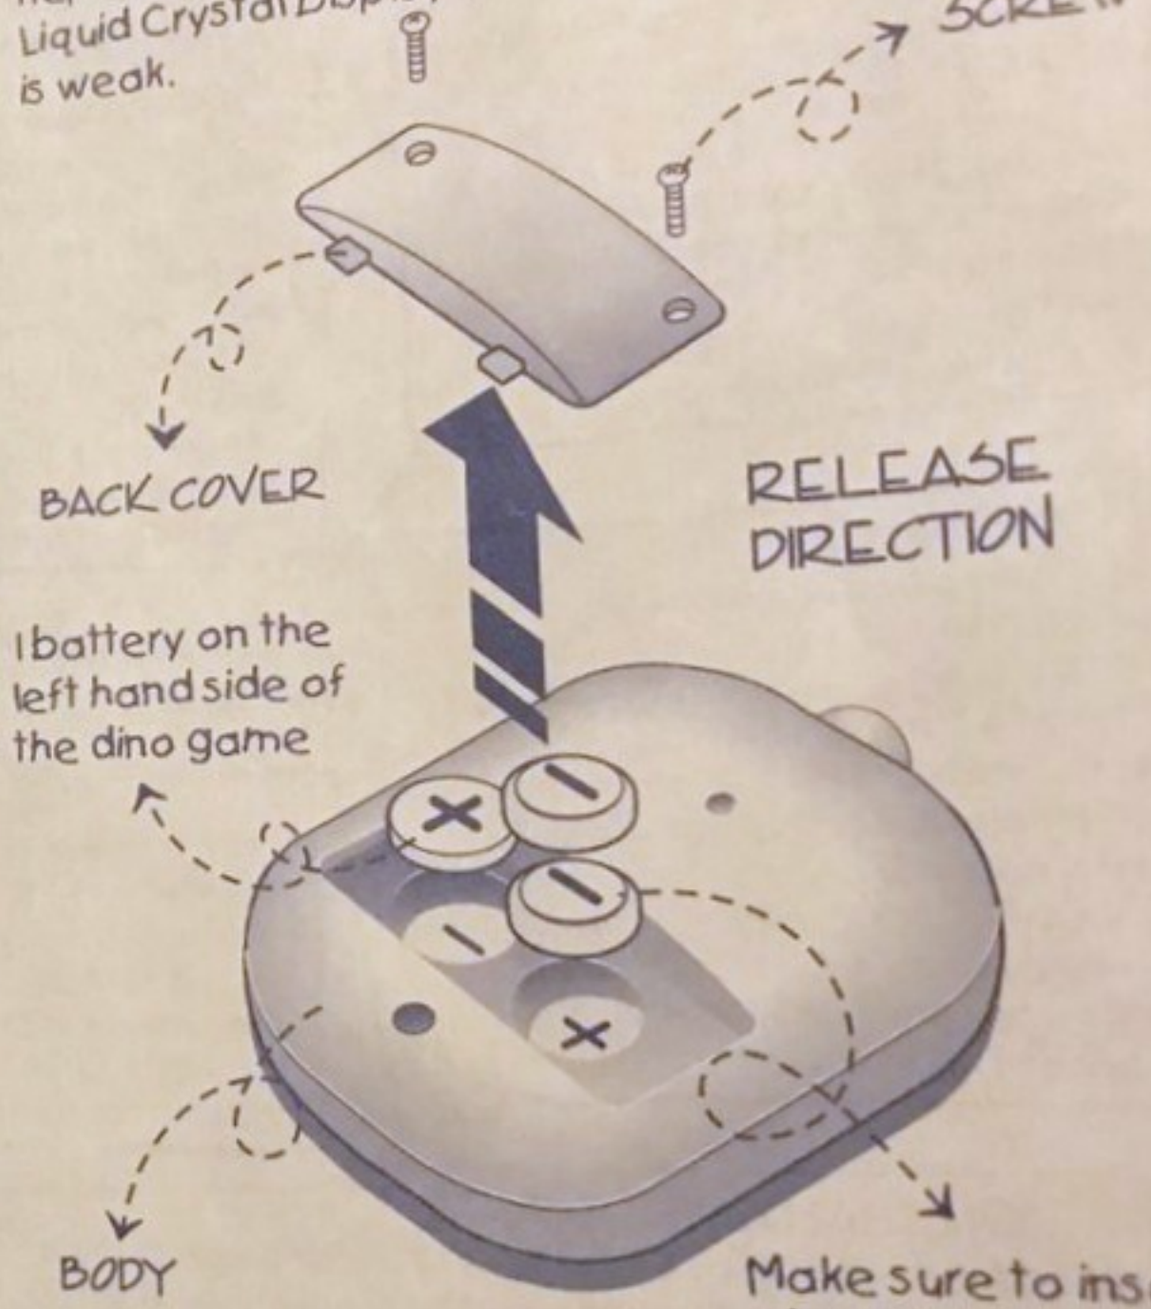

CAUTION

- 3 x 1.5 V Button Cell Batteries, (G10) required (INCLUDED)
- Loosen the screws on the back side to replace the new batteries
- Please replace all batteries at the same time, do not mix old and new batteries
- Don't mix with a different type of battery
- Be sure that the batteries are in correct position
- Recommend for the age 12 or up
- Unsafe for children under 3. Small batteries may be harmful if swallowed
- Please do not try to recharge the battery or put it into the fire